

D Kurz-Betriebsanleitung AMS PSCS-USB

GB Short Operating Instructions AMS PSCS-USB


Version 2015/11/26

Art. No.: 8034504


©2015 PS Automation GmbH

D


1. Installieren Sie die Software PSCS vom beiliegenden USB-Stick
2. Verbinden Sie Ihr PSCS-USB Kabel mit dem USB-Stecker an einem freien USB-Anschluss
3. Starten Sie die Software PSCS
4. Wählen Sie den Antrieb aus

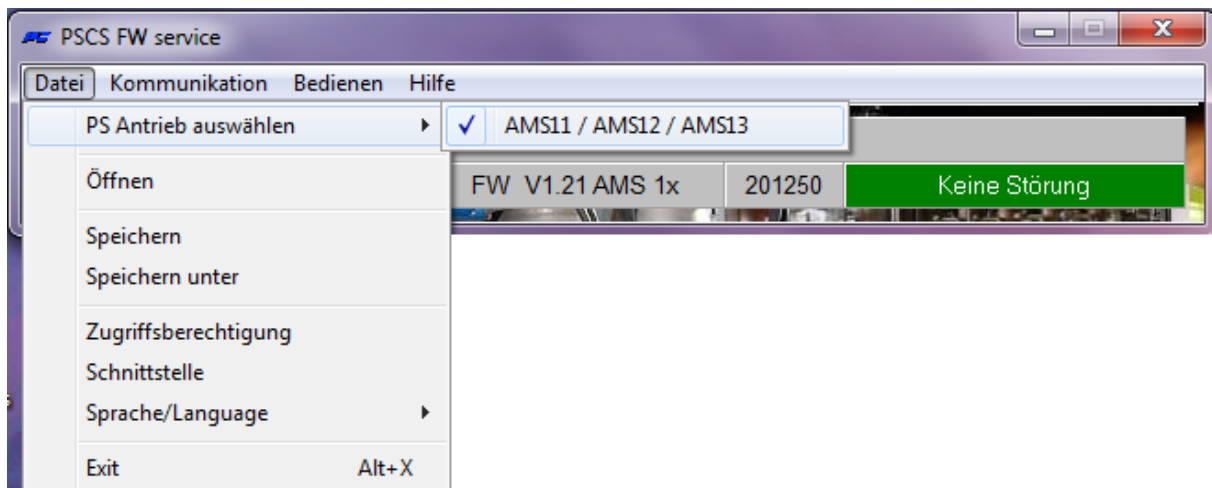

5. Wählen Sie den COM Port für das USB Kabel aus (Autodetect oder via Geräte Manager)

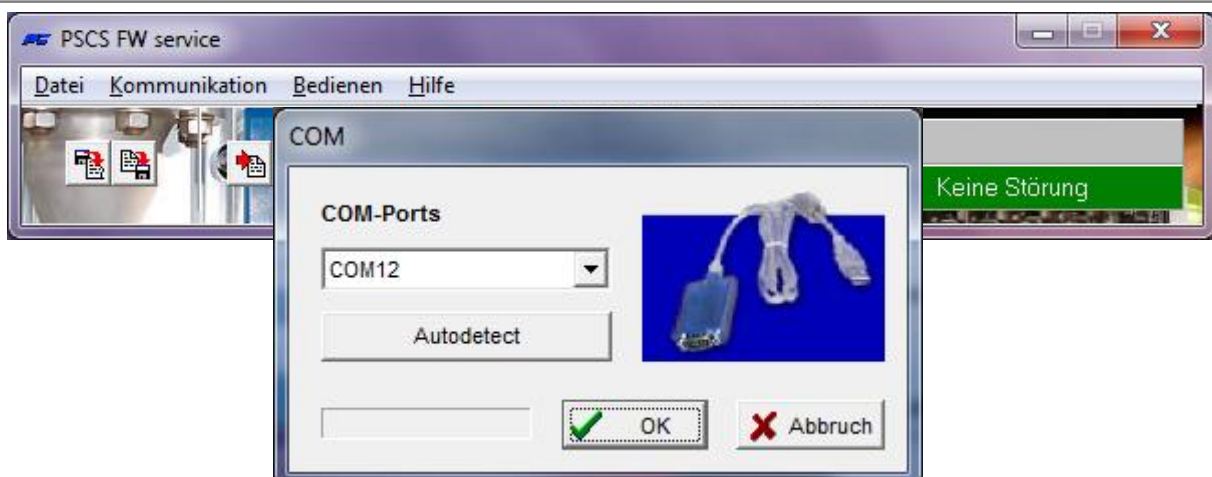


6. Daten vom Antrieb laden, verändern und senden

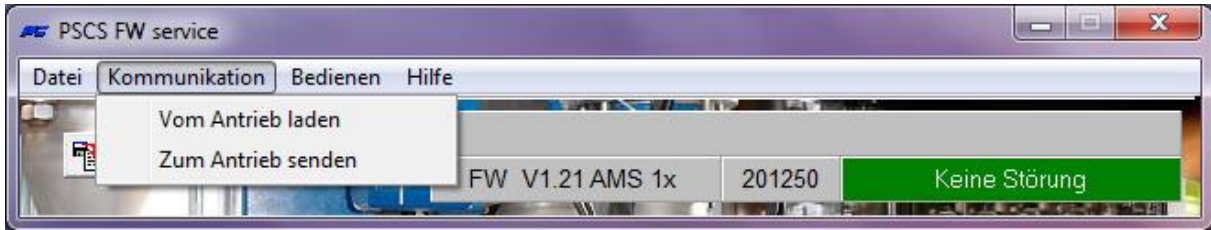


Ausführliche Software auf Anfrage erhältlich!





1. *Install the software PSCS from the USB stick*
2. *Connect your PSCS-USB cable to a free USB port on your PC by using the USB connector*
3. *Open software PSCS*
4. *Select PS actuator*

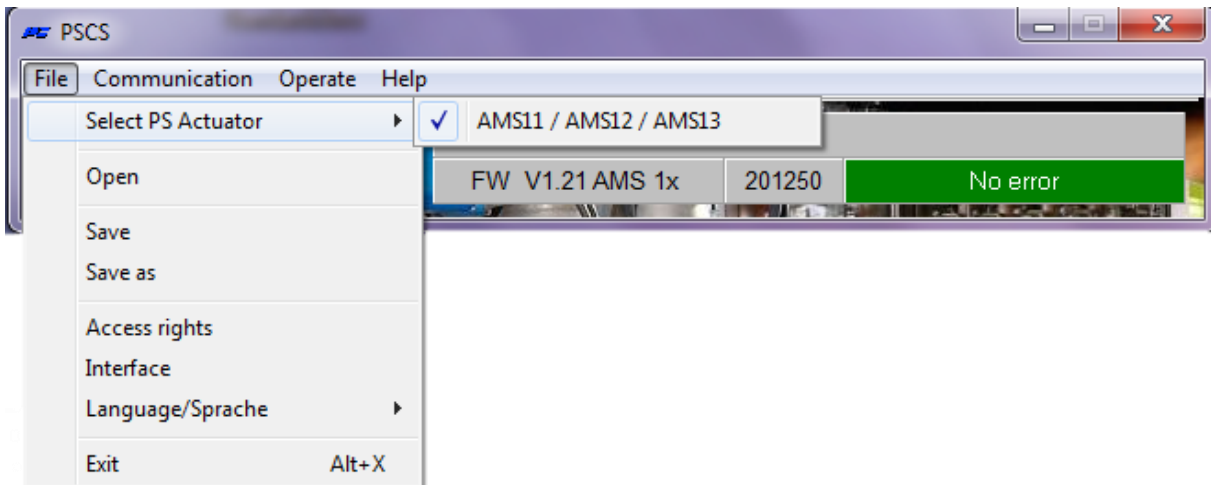

5. Select COM Port, where the PSCS-USB is connected (Autodetect or using the device manager)

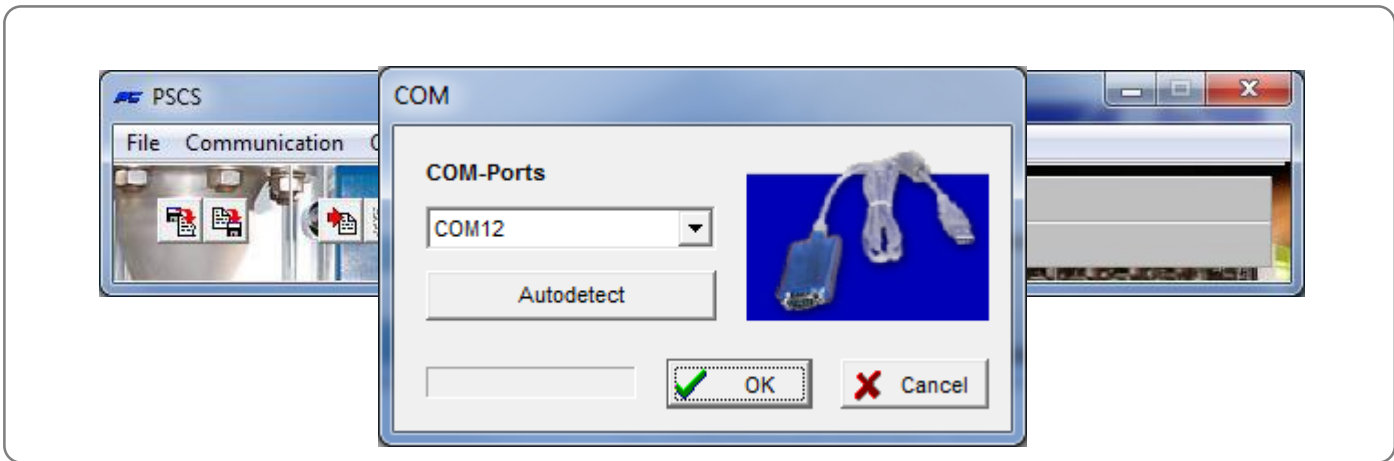

6. Parameter handling

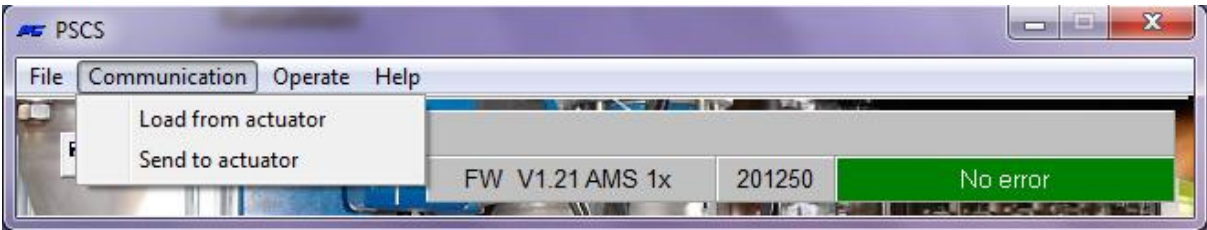Detailed operating instructions for the software available on request!

Grossbritannien / Great Britain

IMTEX Controls Ltd.
Unit 5A, Valley Industries,
Hadlow Road
GB-Tonbridge, Kent TN11 0AH
Tel.: <+44> (0) 17 32-85 03 60
Fax: <+44> (0) 17 32-85 21 33
eMail: sales@imtex-controls.com
www.imtex-controls.com

Italien / Italy

PS Automazione S.r.l.
Via Pennella, 94
I-38057 Pergine Valsugana (TN)
Tel.: <+39> 04 61-53 43 67
Fax: <+39> 04 61-50 48 62
eMail: info@ps-automazione.it

Spanien / Spain

Sertemo, S.L.
Pol. Ind. Alba - Avda. Generalitat 15
Apartado de Correos, 142
E-43480 Vila-Seca (Tarragona)
Tel. : <+34> 9 77 39 11 09
Fax : <+34> 9 77 39 44 80
eMail : hans@sertemo.com
www.sertemo.com

Hong Kong / Hong Kong

MaxAuto Company Ltd.
Room 2008, 20/F., CCT Telecom Building
11 Wo Shing Street
Fotan, Shatin, Hong Kong
Tel.: <+852> 26 87-50 00
Fax: <+852> 81 01-37 43
eMail: info@maxonic.com.hk
www.maxonicauto.com

China / China

Shenzhen Maxonic Automation
Control Co., Ltd.
Maxonic Automation Control Mansion
No. 3 Lang Shan Road, Hi-Tech Industrial Park,
Shenzhen, Guangdong, PRC.
518057
Tel.: <+86> 755 86 25 03 88
Fax: <+86> 755 86 25 03 74
eMail: cg@maxonic.com.cn
www.maxonicauto.com

Indien / India

PS Automation India Pvt Ltd.
Srv. No. 25/1, Narhe Industrial Area,
A.P. Narhegaon, Tal. Haveli, Dist.
IND-411041 Pune
Tel. : <+ 91> 20 25 47 39 66
Fax : <+ 91> 20 25 47 39 66
eMail : sales@ps-automation.in
www.ps-automation.in

PS Automation GmbH

Gesellschaft für Antriebstechnik
Philipp-Krämer-Ring 13
D-67098 Bad Dürkheim

Tel.: +49 (0) 63 22 - 60 03 - 0
Fax: +49 (0) 63 22 - 60 03 - 20
eMail: info@ps-automation.com
www.ps-automation.com

